


# Bifen ITP Suggested Use Rates and Placement

Apply 1 Pack of Bifen ITP to the Perimeter of the Pad Mounted Vault in a 1" Barrier Line


Small Utility Transformer Boxes (38" X 48")

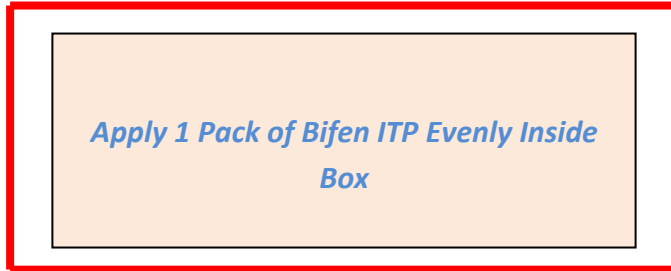

Larger Utility Transformers/Vaults (96" X 96")

Pack 1 Ends  
Start of Pack 2

Apply 2 Packs of Bifen ITP to the Perimeter of the Pad In a 1" Barrier line. Apply evenly and without a skip or break.

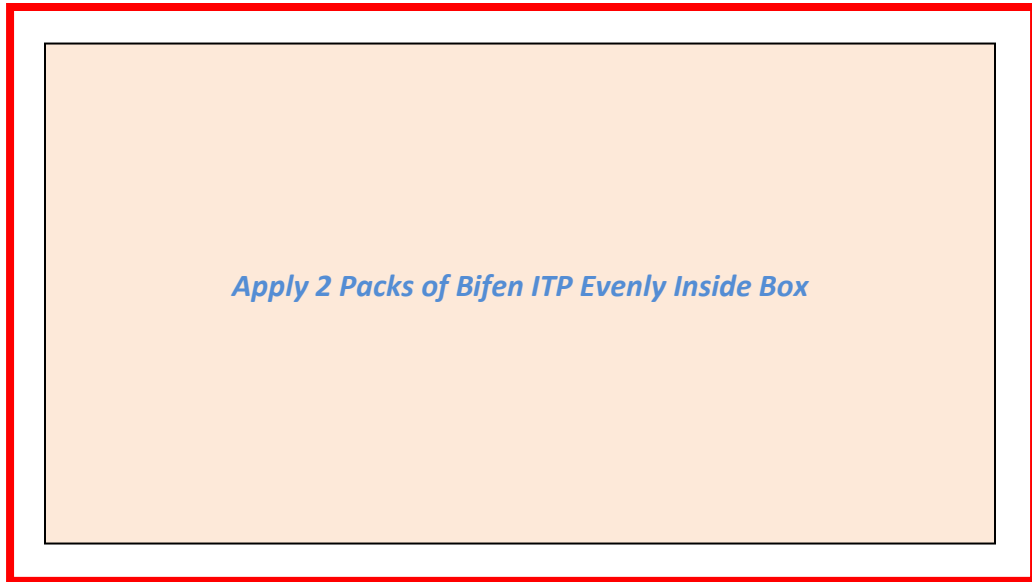

Start with Pack 1